Table of Contents

Instructor Controls	2
Volume Control	2
Camera Controls	3
Lighting Control	4

Instructor Controls

Volume Control

If presenting with audio, you can control presentation volume by pressing either up or down on the arrows (see below graphic). You may also mute either the presentation speakers or the classroom microphones.




Camera Controls

This is the tab that allows you to control the cameras located in the classrooms. You can zoom in and out and change directions or choose from four diffe*rent presets. Larger classrooms will have up to four possible cameras to switch from.*

	•	
Home Info Power Off	202 8 Audio Call: Inactive Zoom Call: Inactive	::18 AM ()
Present Content	Camera Controls	
& Audio Call	Camera 1 Camera 2 Cameras	Switches
Zoom Call		
Camera Controls	Q Zoom Out	amera ontrols
		ದ×
	Devent 1 Devent 2 Devent 4	Mute crophones
	Camera	Mute
	CRESTRON Presets	



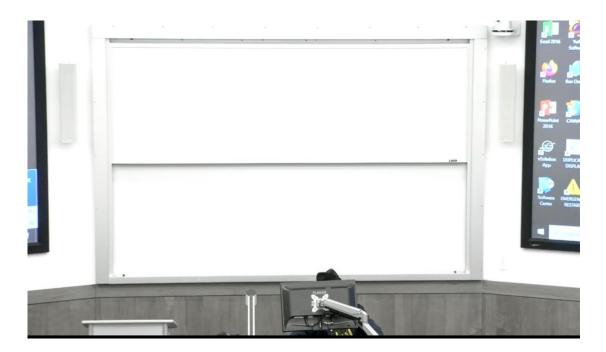

Lighting Control

The Crestron has the ability to control the lights within the classroom.



1. Click the lightbulb symbol located on the right side of the Crestron

· ·		
202 Audio Call: Inactive Zoom Call: Inactive	11:27 PM	ப்
Lighting Controls	Exit	
Front Pendant		A
All On All Off Theater Whiteboard		e
Shades Open Close V V		•
		▼
CRESTRON		

The user can choose from different lighting options:

- a. Turn on all the lights
- b. Theater Mode (Dims the lights in front of the projector screens but audience lights stay on)
- c. Whiteboard Mode (Dims the lights in the audience while the closest to the whiteboard stays on)